

No.	Notes	MODEL HEATING CAPACITY BLOWER DESIGNATION VARIATIONS AIRFLOW FUEL DESIGNATION	UGRJ 04E M A E B/S	UGRJ 06E M A E B/S	UGRJ 07E M A E B/S	UGRJ 07E/07N Y B E B/S	UGRJ 07E/07N Y B G B/S	
HEAT EXCHANGER, BURNER / MANIFOLD								
34	Stk	Heat Exchanger Assembly	AS-61805-22	AS-61805-23	AS-61805-24	AS-61805-26	AS-61805-26	
35		Limit - Main Limit (Heat Exchanger Panel)	See Electrical Group					
49		Limit - Manual Reset (Burner Compartment)	See Electrical Group					
50		Bracket (Limit - Manual Reset) - Before F1799	AE-61913-01 (1)	AE-61913-01 (1)	AE-61913-01 (2)	AE-61913-01 (2)	AE-61913-01 (2)	
50		Bracket (Limit - Manual Reset) - After F1799	AE-61913-02 (1)	AE-61913-02 (1)	AE-61913-02 (2)	AE-61913-02 (2)	AE-61913-02 (2)	
51		Burner Shield	AE-61807-01	AE-61807-02	AE-61807-03	AE-61807-03	AE-61807-03	
52		Burner Diffuser	AE-61882-06	AE-61882-05	AE-61882-01	AE-61882-01	AE-61882-01	
53	Stk	Burners - Before F1799	75-24001-01 (3)	75-24001-01 (4)	75-24001-01 (5)	75-24001-01 (5)	75-24001-01 (5)	
53	Stk	Burner Assembly - After F1799	AS-61984-03	AS-61984-04	AS-61984-05	AS-61984-05	AS-61984-05	
54		Burner Support Bracket (2)	AE-61808-01	AE-61808-01	AE-61808-01	AE-61808-01	AE-61808-01	
55		Burner Support - Before F1799	AE-61809-01	AE-61809-02	AE-61809-03	AE-61809-03	AE-61809-03	
55		Burner Support - After F1799	AE-61809-11	AE-61809-12	AE-61809-13	AE-61809-13	AE-61809-13	
56	Stk	Manifold (w/o Orifices) - Before F1799	AS-61815-01	AS-61815-02	AS-61815-03	AS-61815-03	AS-61815-03	
56	Stk	Manifold (w/o Orifices) - After F1799	AS-61815-11	AS-61815-12	AS-61815-13	AS-61815-13	AS-61815-13	
		NOX Burner Inserts - After F1799	N/A	N/A	N/A	AE-67863-01 (4)	AE-67863-01 (4)	
		NOX Retaining Bracket - After F1799	N/A	N/A	N/A	AE-67864-02	AE-67864-02	
58		Burner Orifice - Natural Gas	See Orifice Selection Chart					
58		Burner Orifice - LP	See Orifice Selection Chart					
		Number of Orifices	(3)	(4)	(5)	(5)	(5)	

No.	Notes	MODEL HEATING CAPACITY BLOWER DESIGNATION VARIATIONS AIRFLOW FUEL DESIGNATION	UGRJ 09E Z A G B/S	UGRJ 09E Z A J B/S	UGRJ 10E Z A G B/S	UGRJ 10E Z A J B/S	UGRJ 12E R A G B/S	UGRJ 12E R A J B/S	
BURNER / MANIFOLD GROUP -- BEFORE 05/01/99									
34	Stk	Heat Exchanger Assembly	AS-61805-25	AS-61805-25	AS-61805-27	AS-61805-27	AS-61805-28	AS-61805-28	
35		Limit - Main Limit (Heat Exchanger Panel)	See Electrical Group						
49		Limit - Manual Reset (Burner Compartment)	See Electrical Group						
50		Bracket (Limit - Manual Reset) - Before F1799	AE-61913-01 (2)	AE-61913-01 (2)	AE-61913-01 (2)	AE-61913-01 (2)	AE-61913-01 (3)	AE-61913-01 (3)	
50		Bracket (Limit - Manual Reset) - After F1799	AE-61913-02 (2)	AE-61913-02 (2)	AE-61913-02 (2)	AE-61913-02 (2)	AE-61913-02 (3)	AE-61913-02 (3)	
51		Burner Shield	AE-61807-04	AE-61807-04	AE-61807-05	AE-61807-05	AE-61807-06	AE-61807-06	
52		Burner Diffuser	AE-61882-02	AE-61882-02	AE-61882-03	AE-61882-03	AE-61882-04	AE-61882-04	
53	Stk	Burners - Before F1799	75-24001-01 (6)	75-24001-01 (6)	75-24001-01 (7)	75-24001-01 (7)	75-24001-01 (8)	75-24001-01 (8)	
53	Stk	Burner Assembly - After F1799	AS-61984-06	AS-61984-06	AS-61984-07	AS-61984-07	AS-61984-08	AS-61984-08	
54		Burner Support Bracket (2)	AE-61808-01	AE-61808-01	AE-61808-01	AE-61808-01	AE-61808-01	AE-61808-01	
55		Burner Support - Before F1799	AE-61809-04	AE-61809-04	AE-61809-05	AE-61809-05	AE-61809-06	AE-61809-06	
55		Burner Support - After F1799	AE-61809-14	AE-61809-14	AE-61809-15	AE-61809-15	AE-61809-16	AE-61809-16	
56	Stk	Manifold (w/o Orifices) - Before F1799	AS-61815-04	AS-61815-04	AS-61815-05	AS-61815-05	AS-61815-06	AS-61815-06	
56	Stk	Manifold (w/o Orifices) - After F1799	AS-61815-14	AS-61815-14	AS-61815-15	AS-61815-15	AS-61815-16	AS-61815-16	
		NOX Burner Inserts - After F1799	N/A	N/A	N/A	N/A	N/A	N/A	
		NOX Retaining Bracket - After F1799	N/A	N/A	N/A	N/A	N/A	N/A	
58		Burner Orifice - Natural Gas	See Orifice Selection Chart						
58		Burner Orifice - LP	See Orifice Selection Chart						
		Number of Orifices	(6)	(6)	(7)	(7)	(8)	(8)	