

No.	Notes	MODEL HEATING CAPACITY BLOWER DESIGNATION VARIATION AIRFLOW	RGRS- 04 M A E	RGRS- 06 M A E		
<b>HEAT EXCHANGER, BURNER / MANIFOLD GROUP</b>						
34	Stk	Heat Exchanger Assembly	<a href="#">AS-61805-22</a>	<a href="#">AS-61805-23</a>		
35	Stk	Limit - Main Limit (Heat Exchanger Panel)	See Electrical Group			
49	Stk	Limit - Manual Reset (Burner Compartment)	See Electrical Group			
50		Bracket - (Limit - Manual Reset)	<a href="#">AE-61913-02</a> (1)	<a href="#">AE-61913-02</a> (1)		
51		Burner Shield	<a href="#">AE-61807-01</a>	<a href="#">AE-61807-02</a>		
52		Burner Diffuser	<a href="#">AE-61882-12</a>	<a href="#">AE-61882-11</a>		
53	Stk	Burner Assembly	<a href="#">AS-61984-03</a>	<a href="#">AS-61984-04</a>		
54		Burner Support Bracket (2)	<a href="#">AE-61808-01</a>	<a href="#">AE-61808-01</a>		
55		Burner Support	<a href="#">AE-61809-11</a>	<a href="#">AE-61809-12</a>		
56	Stk	Manifold (w/o Orifices)	<a href="#">81-24395-01</a>	<a href="#">81-24395-02</a>		
58		Burner Orifice - Natural Gas	See Orifice Selection Chart			
58		Burner Orifice - LP	See Orifice Selection Chart			
		Number of Orifices	(3)	(4)		

No.	Notes	MODEL HEATING CAPACITY BLOWER DESIGNATION VARIATION AIRFLOW	RGRS- 09 Z A G	RGRS- 09 Z A J	RGRS- 10 Z A J	RGRS- 12 R A J
<b>HEAT EXCHANGER, BURNER / MANIFOLD GROUP</b>						
34	Stk	Heat Exchanger Assembly	<a href="#">AS-61805-25</a>	<a href="#">AS-61805-25</a>	<a href="#">AS-61805-27</a>	<a href="#">AS-61805-28</a>
35	Stk	Limit - Main Limit (Heat Exchanger Panel)	See Electrical Group			
49	Stk	Limit - Manual Reset (Burner Compartment)	See Electrical Group			
50		Bracket - (Limit - Manual Reset)	<a href="#">AE-61913-02</a> (2)	<a href="#">AE-61913-02</a> (2)	<a href="#">AE-61913-02</a> (2)	<a href="#">AE-61913-02</a> (3)
51		Burner Shield	<a href="#">AE-61807-04</a>	<a href="#">AE-61807-04</a>	<a href="#">AE-61807-05</a>	<a href="#">AE-61807-06</a>
52		Burner Diffuser	<a href="#">AE-61882-08</a>	<a href="#">AE-61882-08</a>	<a href="#">AE-61882-09</a>	<a href="#">AE-61882-10</a>
53	Stk	Burner Assembly	<a href="#">AS-61984-06</a>	<a href="#">AS-61984-06</a>	<a href="#">AS-61984-07</a>	<a href="#">AS-61984-08</a>
54		Burner Support Bracket (2)	<a href="#">AE-61808-01</a>	<a href="#">AE-61808-01</a>	<a href="#">AE-61808-01</a>	<a href="#">AE-61808-01</a>
55		Burner Support	<a href="#">AE-61809-14</a>	<a href="#">AE-61809-14</a>	<a href="#">AE-61809-15</a>	<a href="#">AE-61809-16</a>
56	Stk	Manifold (w/o Orifices)	<a href="#">81-24395-04</a>	<a href="#">81-24395-04</a>	<a href="#">81-24395-05</a>	<a href="#">81-24395-06</a>
58		Burner Orifice - Natural Gas	See Orifice Selection Chart			
58		Burner Orifice - LP	See Orifice Selection Chart			
		Number of Orifices	(6)	(6)	(7)	(8)