

RECTORSEAL

A CSW Industrials Company

INSTALLATION INSTRUCTIONS






ACGUARD ACGU

Adjustable AC Cage



PRODUCT CODE **ACGU, ACGU KIT**

* Four 1/4" x 2-3/4" Countersunk Tapcons not included. (#24185)

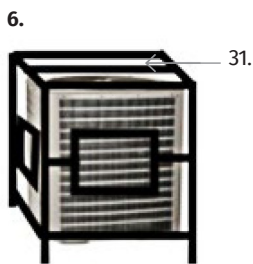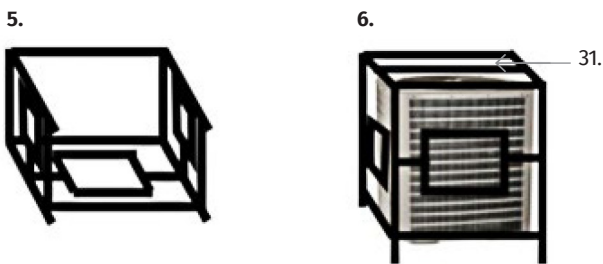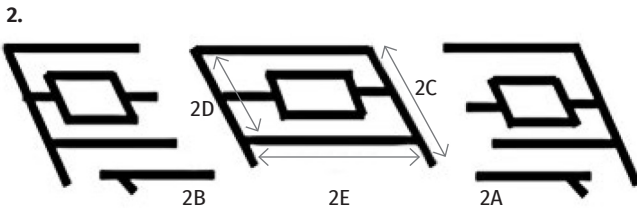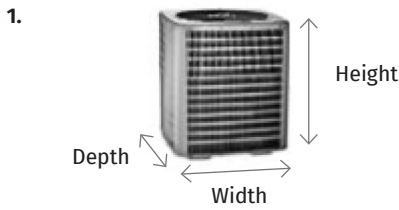

Recommended tools: A tape measure, a drill, 3/16" masonry bit, a 1/4" socket, a Philips bit and a pencil or marker.

Before beginning:

1. Remove all shrubs or debris from around AC unit.
2. Measure and write the AC unit's height, width and depth.
3. Place all box contents flat on the ground, arranging sections in Left, Front Center, and Right format, with stubs facing up as shown here.

ASSEMBLY INSTRUCTIONS:

1. Set Left, Front Center and Right sections flat on the ground with stubs and stickers facing up. *See diagram 2.*
2. Align orange sticker to orange sticker: L-shaped bar's orange R sticker with Right panel orange R sticker and slide fully on. *See diagram 2.A.*
3. Align yellow sticker to yellow sticker: L-shaped bar's yellow L sticker with Left panel L sticker and slide fully on. *See diagram 2.B.*
4. Insert ALL set screws loosely as these will need to be tightened once cage's final dimension has been reached.
5. Add 4 inches to the height dimension of the AC unit.
NOTE: Adjusting the Front Center section fully before attaching side panels will simplify assembly.
6. Remove blue tape from front center section.
7. Measure Front Center section top to bottom and extend the cage to the height required (#6). *See diagram 2.C.*
8. Adjust the section's center square to be equal distance from top and bottom bar, while ensuring the height remains at the required dimension. *See diagram 2.D.*
9. Snug 4 set screws on this sections Left and Right side bars.
10. Consider pad size and add 2" - 6" to the width dimension for inside clearance.
11. Extend the cage left and right to the width required. *See diagram 2.E.*
12. Snug all remaining set screws on this section.
13. Lift Right section, remove tape and spread, drop in to Front Center section stubs. *See diagram 3.*
14. Insert set pins into right section's stub holes, with black head facing cage exterior.
15. Snap locking caps onto pins, inside of cage.
16. Repeat 14-16 for Left section. *See diagram 4.*
17. Install Back Bar over corner stub, left side first and insert set pin, then extend Back Bar to insert into right side stub, inserting set pin and snapping on both caps.

Technical Support Call 1-800-648-6802



30 x 30 x 30 Fixed Cage

INSTALLATION INSTRUCTIONS

18. Stand cage upright.
19. To square, confirm cage's inside width dimension is equal for both front and back and tighten Back Bar set screw.
20. Add 2" – 6" to the depth dimension of your AC unit for needed interior clearance.
21. Spread cage's L and R side panels to desired depth. *See diagram 5.*
22. Recheck all height, width and depth dimensions to ensure cage is square, tightening all set screws as you go.
23. Place cage over AC unit with Back Bar toward the building.
24. Trace both square foot brackets onto pad surface.
FOR IN-GROUND INSTALLATION VISIT: <https://rs.today/ac-guard>
25. Tilt cage forward, to allow full access to AC unit.
26. Place ground-plates on traced pattern with holes parallel to cage and pad-lock loop positioned farthest from the AC unit.
27. Mark spots where holes are to be drilled.
28. Drill 4 holes (use 3/16" x 4 1/2" concrete drill bit).
29. Position ground-plates over holes with pad-lock loop facing away from AC. Recommend Tapcon 1/4" x 2 3/4" concrete anchors with tapered Phillips head so they sit flush w plate.
30. Tile cage forward over AC unit positioning ground plate loop thru cage foot.

NOTE: Top bar, locks and magnetic lock box are ONLY included when purchasing ACGU KIT.

31. Stretch Top Bar to desired length. *See diagram 6.*
32. Parts for installing the top bar are attached to the bar with blue tape.
33. Position Top Bar at cage's center and secure the U-Shaped ends into the cage left and right sides. Drill the self-tapping screws provided into the cage frame using a 1/4" drill nut driver.
34. Install locks.
35. Place one of the keys in the magnetic hide-a-key and attach to AC handler inside home or office for easy maintenance access.

Limited Warranty



For more information on our product warranty, visit rectorseal.com.

Manufactured by

RectorSeal, LLC

2601 Spenwick Drive • Houston, TX 77055, USA • 800-231-3345 • Fax 800-441-0051 • rectorseal.com

3255 Wyandotte St. East • Windsor, ON N8Y 1E9, Canada • 519-966-4901

A CSW Industrials Company. RectorSeal, the logos and other trademarks are property of RectorSeal, LLC, its affiliates or its licensors and are protected by copyright, trademark and other intellectual property laws, and may not be used without permission. RectorSeal reserves the right to change specifications without prior notice. ©2023 RectorSeal. All rights reserved. R51016-0723